



Refrigerator Panel

EF-RP

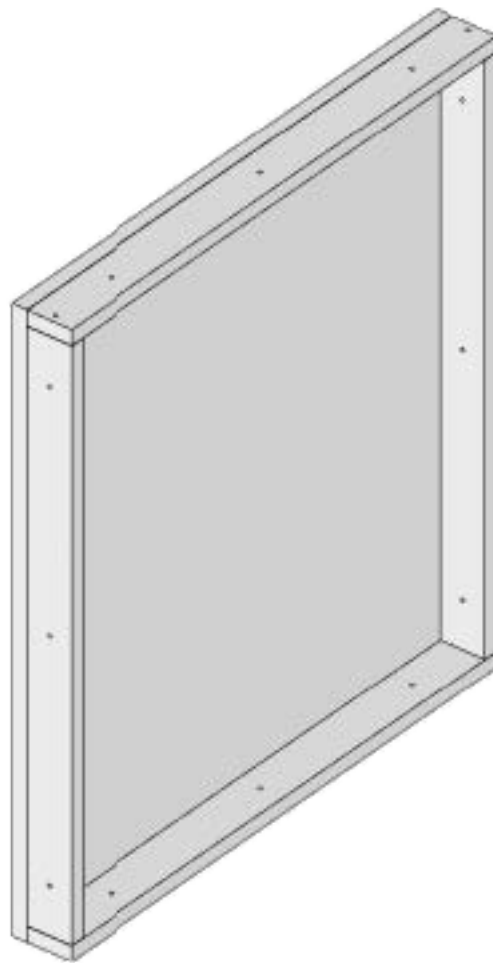

Tools


To assemble this product you will require:

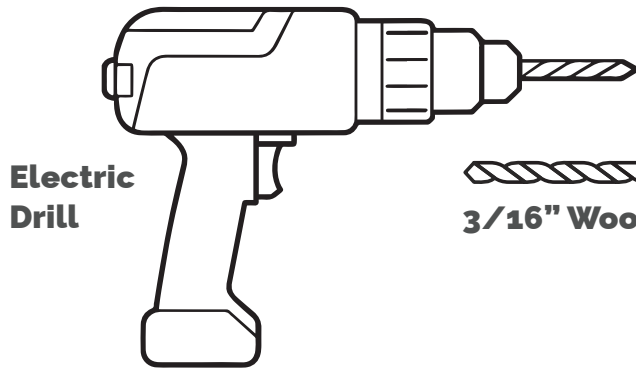


Electric Drill



3/16" Wood Drill Bit




Phillips Screwdriver

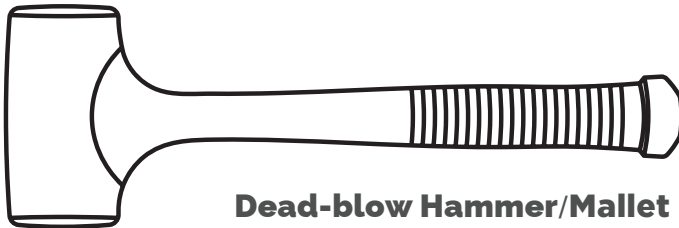

Dead-blow Hammer/Mallet


Equipment

To assemble this product you should have:

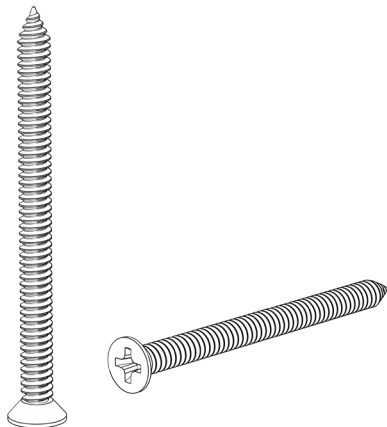

#6 x 1 3/4" Stainless Steel Phillips Head Screw


These screws are used for assembly of cabinet parts. Bottom shelf to back panel, drawer bottom to drawer side and drawer front and back.
(4 pcs.)

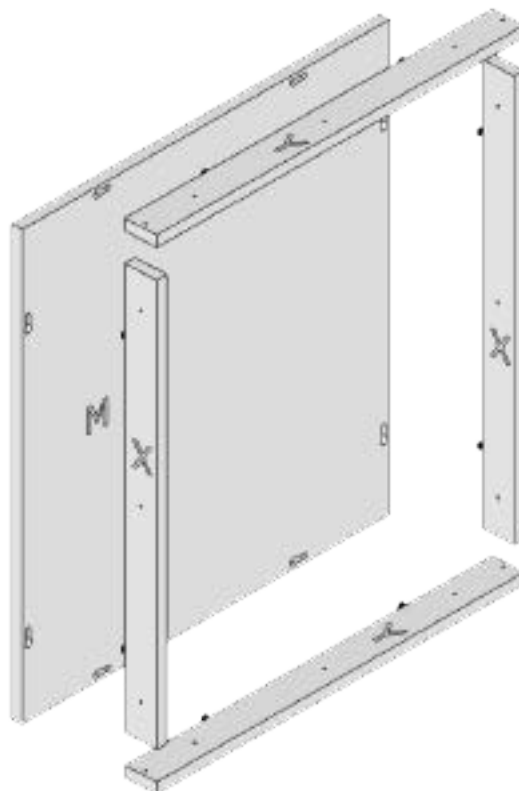

Part	Qty	Part Name
M	1	Base Filler Panel
X	2	Base Stile
Y	2	Support Rail

Invisa-lock™

This cabinet use

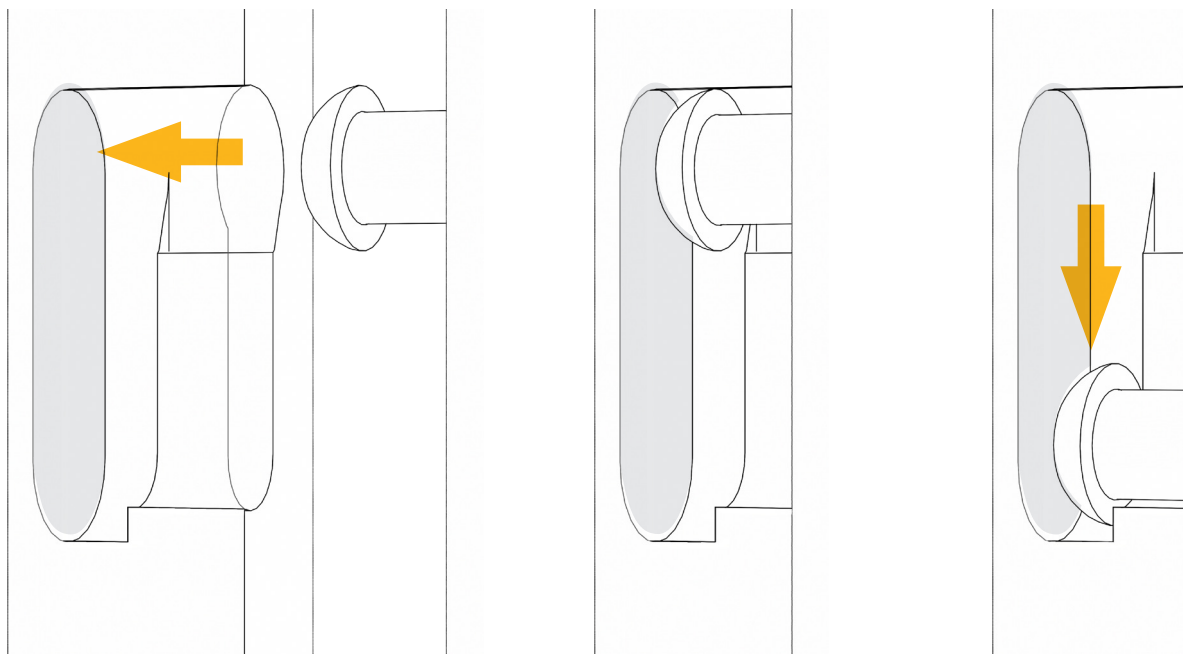

General Assembly Techniques:

1


Ensure the larger offset of the Invisa-lock™ connector is always positioned facing to the outside of the cabinet.

2

Always ensure each panel is flush otherwise this could lead to improper assembly.


3



Do not fully engage the locking system until prompted in the instructions. To fully engage the locking system, ensure all parts are aligned and flush, then use a deadblow hammer to gently tap all joining parts into a locked position.

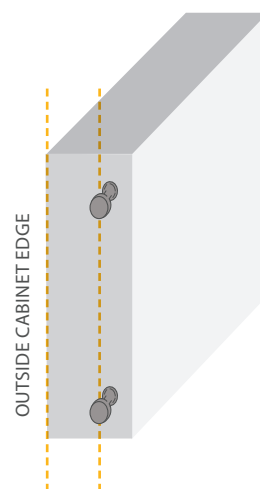


Note:


The connector is offset on the panel. The offset must face the outside of the cabinet.

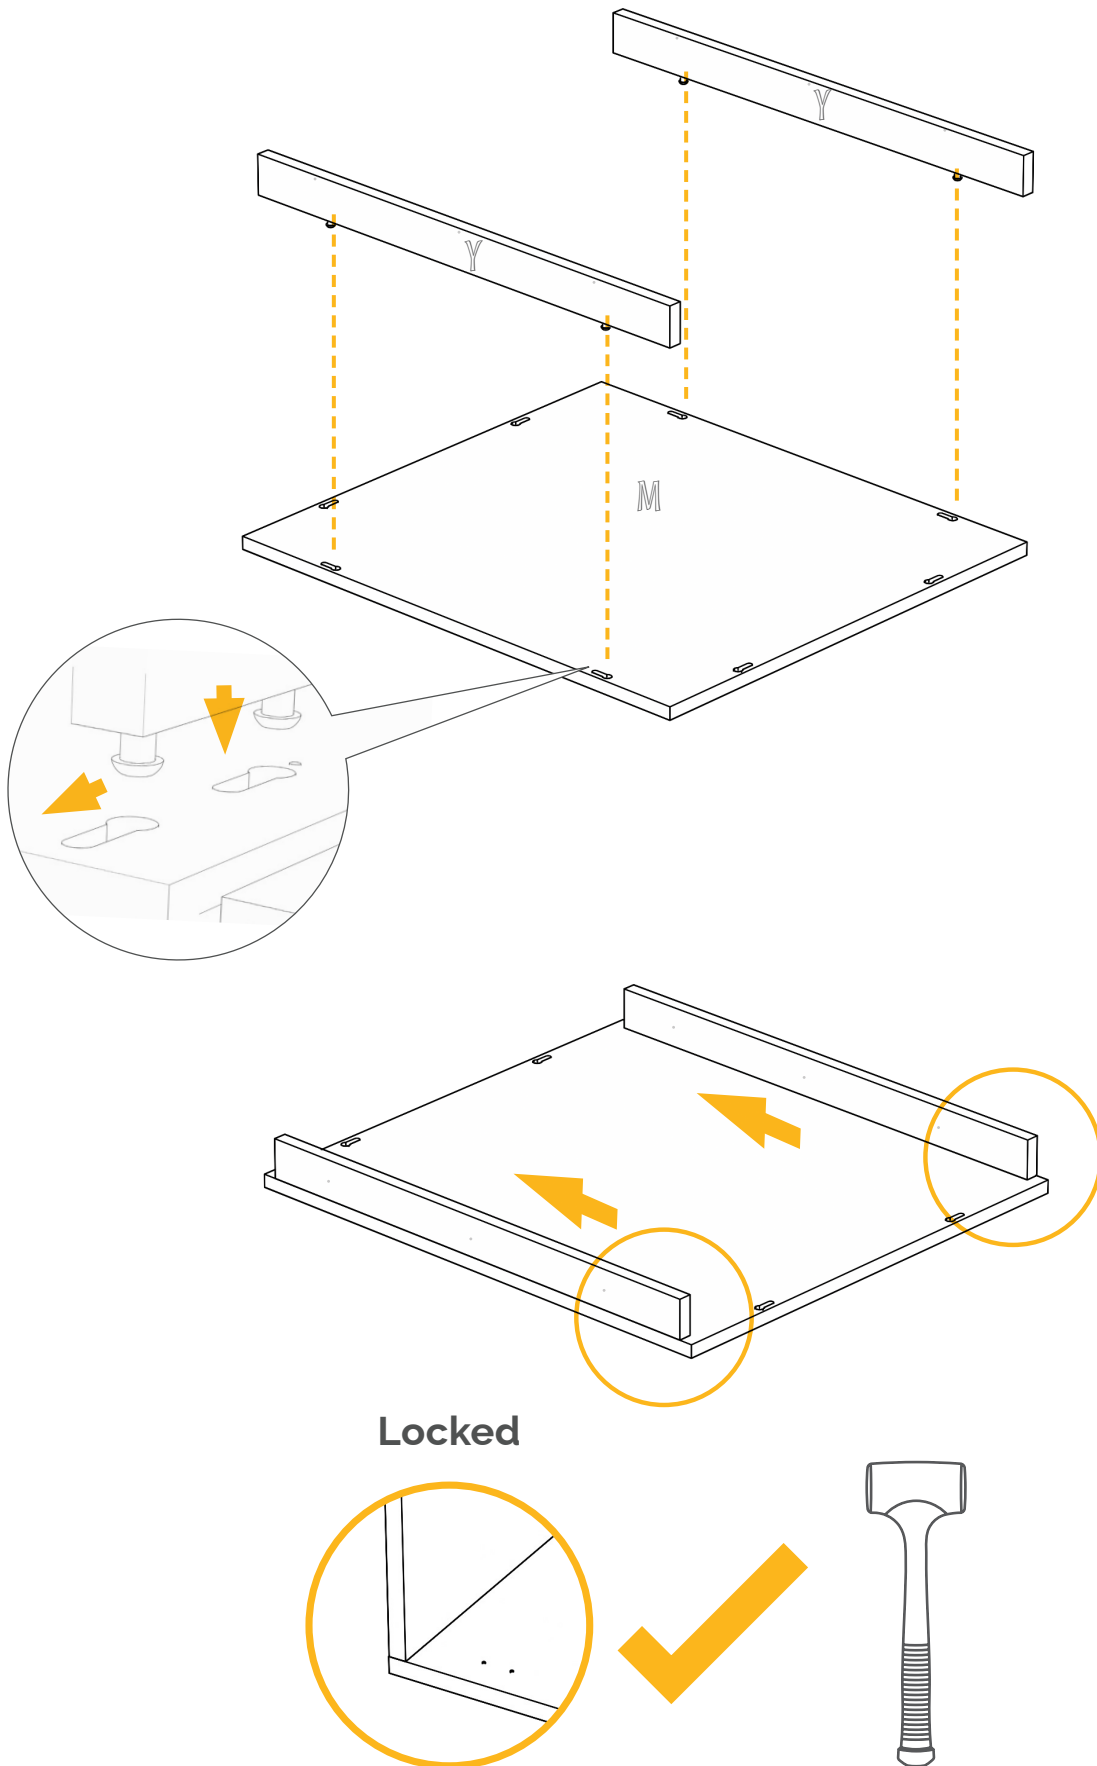


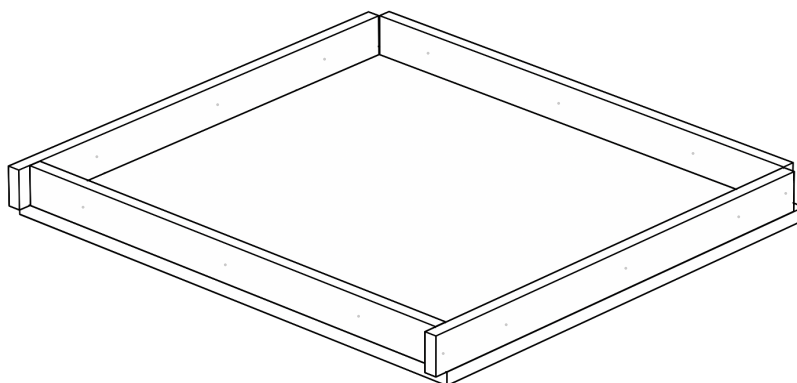
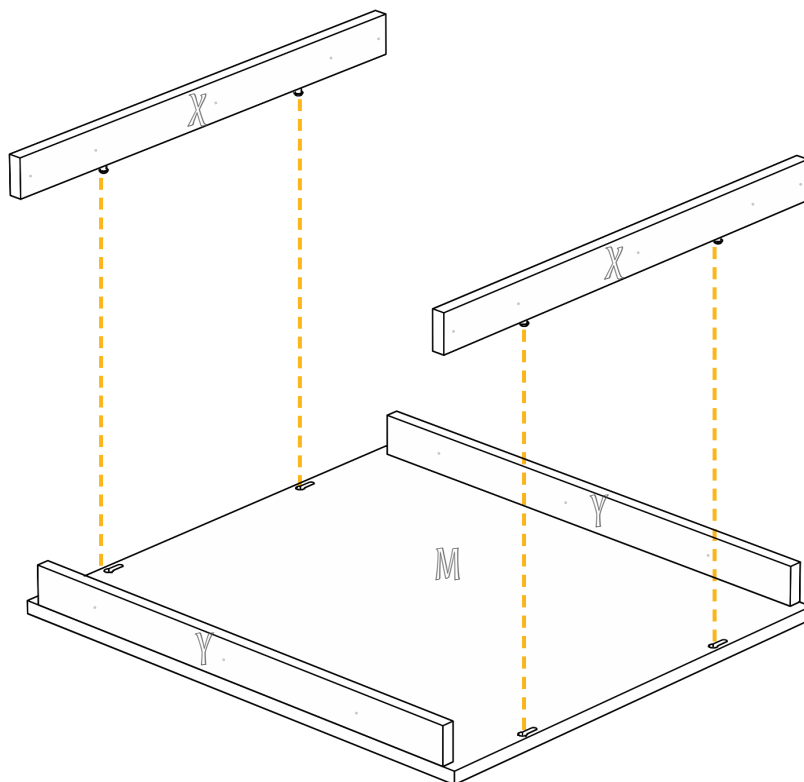


Unlocked

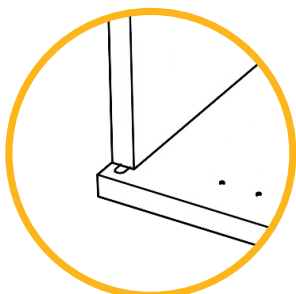

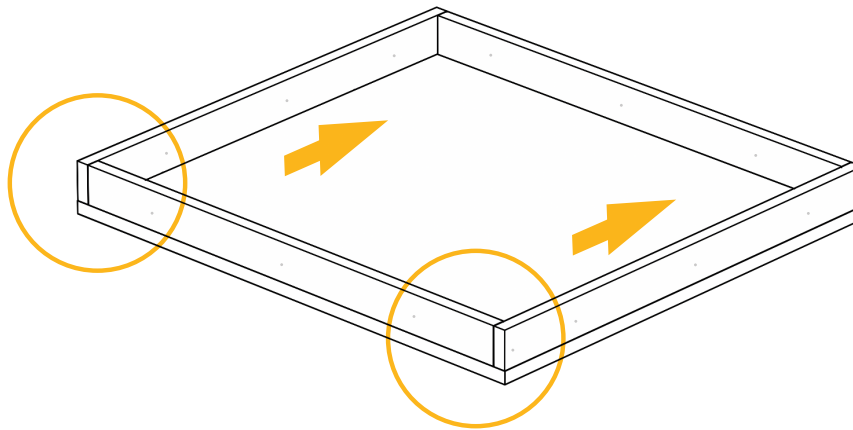

Locked

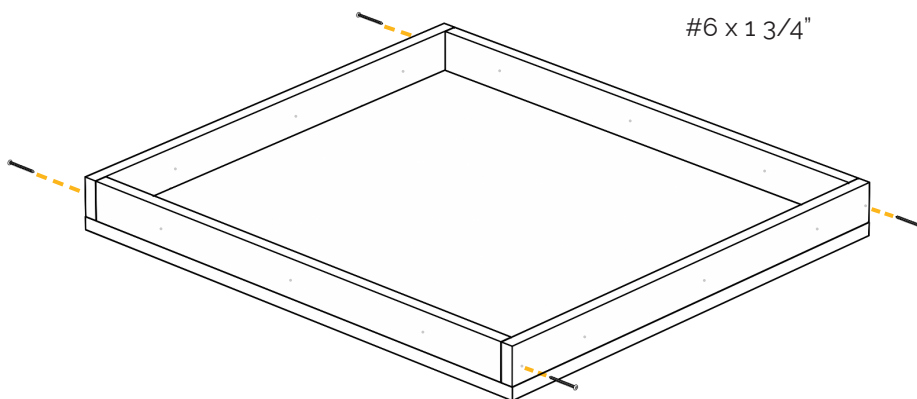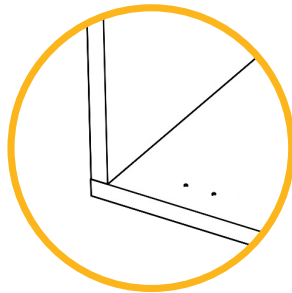

#6 x 1 3/4"

