

INSTALLING FILLER

When installing outdoor cabinet Fillers, follow these steps to ensure a perfect fit and secure attachment.

1. Verify if your design includes Fillers. Measure the actual space where the Fillers will be installed, as they might require trimming.
2. If the Fillers need to be adjusted, trim them using a table saw or miter saw. An ordinary woodworking saw can also be used for this task. Ensure precise cuts to maintain a professional appearance.
3. The Filler is intended to be installed flush with the front edge of the neighboring cabinet end panel for a seamless look.
4. Attach the Filler to the cabinet by pre-drilling pilot holes through the cabinet box into the Filler secure with #8 x 1 1/4" stainless pan-head screws from inside the cabinet into the Filler (Figure 1).

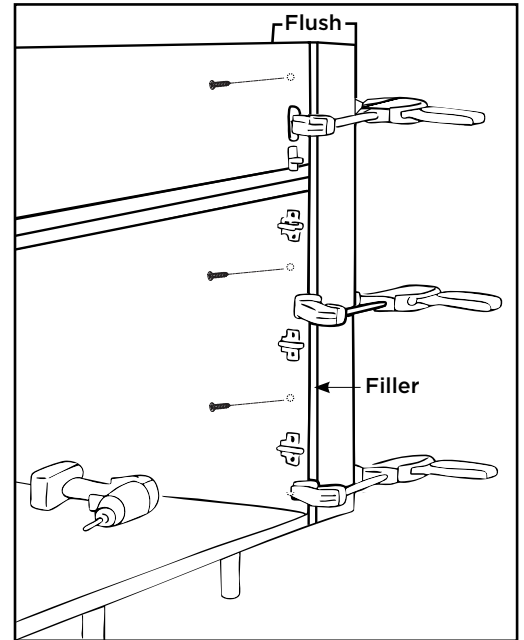


Figure 1

INSTALLING A FILLER WHEN GRILL CABINETS ARE AGAINST A WALL

To prevent the grill vents from being blocked when installing cabinets against a wall, use 3"x30" Filler.

1. Using a saw, trim the Filler into three 1"x30" strips.
2. Install one strip on either side of the cabinet run using four single-hole angle brackets and 2 stainless steel 1/2" screws, making sure the Filler strip is flush with the top, (Figure 2).



PRO TIP: For a successful installation on an exterior wall, it's essential to use the appropriate anchors, screws, and sealants designed for your wall applications. If you are uncertain about any part of the installation process, consider consulting a professional with experience in installing cabinets on brick walls to ensure a safe and effective installation.

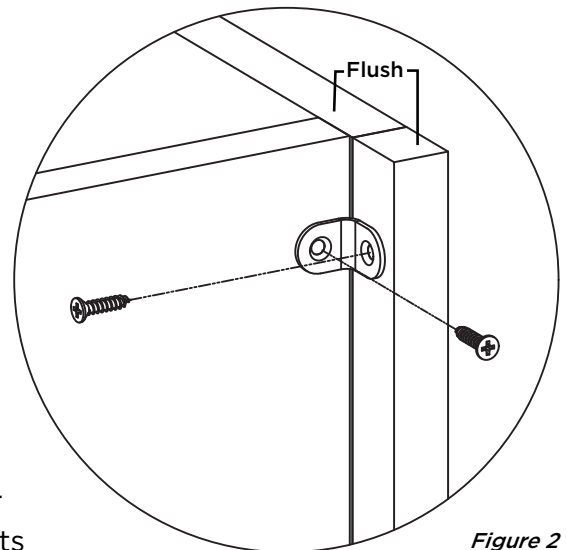


Figure 2